

# **DECORATION SPEC SHEET**



EB500 Eddie Bauer<sup>®</sup> - Packable Wind Jacket

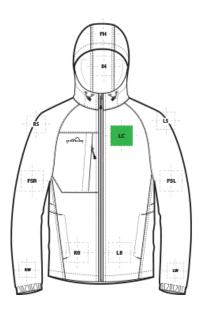

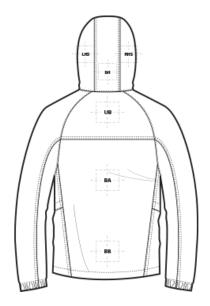

FRONT DECORATION DIMENSIONS				
LB	Left Bottom	6"H x 6"W		
LC	Left Chest	4"Hx4"W	Primary	
RB	Right Bottom	6"H x 6"W		

BACK DECORATION DIMENSIONS				
BA	Back	19"H x 15"W		
BB	Back Bottom	6"H x 14"W		
UB	Upper Back	7"H x 15"W		

SLEEVE DECORATION DIMENSIONS				
FSL	Full Sleeve Left	24"H x 5"W		
FSR	Full Sleeve Right	24"H x 5"W		
LS	Left Shoulder	8"H x 8"W		
LW	Left Wrist	5"H x 5"W		
RS	Right Shoulder	8"H x 8"W		
RW	Right Wrist	5"H x 5"W		

### HOOD DECORATION DIMENSIONS

## **DECORATION SPEC SHEET**

Eddie/Bawer-

## EB500 Eddie Bauer<sup>®</sup> - Packable Wind Jacket

BH	Back Hood	4"H x 4"W	
FH	Front Hood	4"H x 4"W	
IH	Inside Hood	4"H x 4"W	
LHS	Left Hood Side	7"H x 7"W	
RHS	Right Hood Side	7"H x 7"W	

Decoration range is dependent on product, decoration method and equipment used. Allow for 1/8" per size. Sizing is based off: Adult–L, Women's–M, Youth–L, Girls–M. Please consult with your decorator or supplier.

### DECORATION TECHNIQUES



## ESSENTIAL PRODUCT INFORMATION

Due to the nature of nylon, special care must be taken throughout the decoration process when heat is applied for curing. Please consult with your decorator or material supplier.

## TIPS FROM OUR EXPERTS BY DECORATION TECHNIQUE



#### EMBROIDERY

Embroidery is the art of embellishing a piece of apparel with a needle and thread or yarn creating stunning visual representations of various types of art. This is achieved by converting logos in a digitizing software and using various stitch patterns, angles, density and stitch types to create depth, movement and detail. Thread can be made from many materials. The most commonly used threads are polyester and rayon. There are also options such as metallic, cotton, nylon, silk and even Nomex thread for fire resistance. Embroidery has a very high-perceived value and is popular for use on most apparel, bags, hats, luggage, blankets and more!

Resealing the back of embroidery on this product to retain waterproof and water-resistant properties is recommended.

## **DECORATION SPEC SHEET**



EB500 Eddie Bauer<sup>®</sup> - Packable Wind Jacket



#### SCREEN PRINTING

An imprinting method in which the image is transferred to the fabric. Ink is squeegeed through a stenciled screen stretched over a frame and then cured in a dryer.

Bonding catalysts may be required for stain release, water resistant/waterproof coated and nylon fabrics.



#### **HEAT TRANSFERS**

A graphic, name and or number applied to a textile with a heat press. Great for quantities of any size, sports name and numbering, fashion, performance wear, print on demand programs and on-site decorating events.

Heat transfers with an aggressive adhesive are required for stain release, water resistant/waterproof coated and nylon fabrics. Consult with your transfer supplier for recommendations.



#### PAD PRINTING

Pad printing uses a soft silicone pad to transfer an image taken from a plate etched with a reversed logo, similar to a rubber stamp. Images can be very small and detailed and can be up to 5½ inches in diameter. Pad printers are capable of printing up to six colors, however most industry printers use one to two colors at most when printing on apparel. Pad printing is a popular trend for tagless label printing. The prints are soft, durable and capable of high and low volume production. Pad printing is great for sling bags, totes and other items that are difficult to decorate, as well as styles that are heat sensitive.